


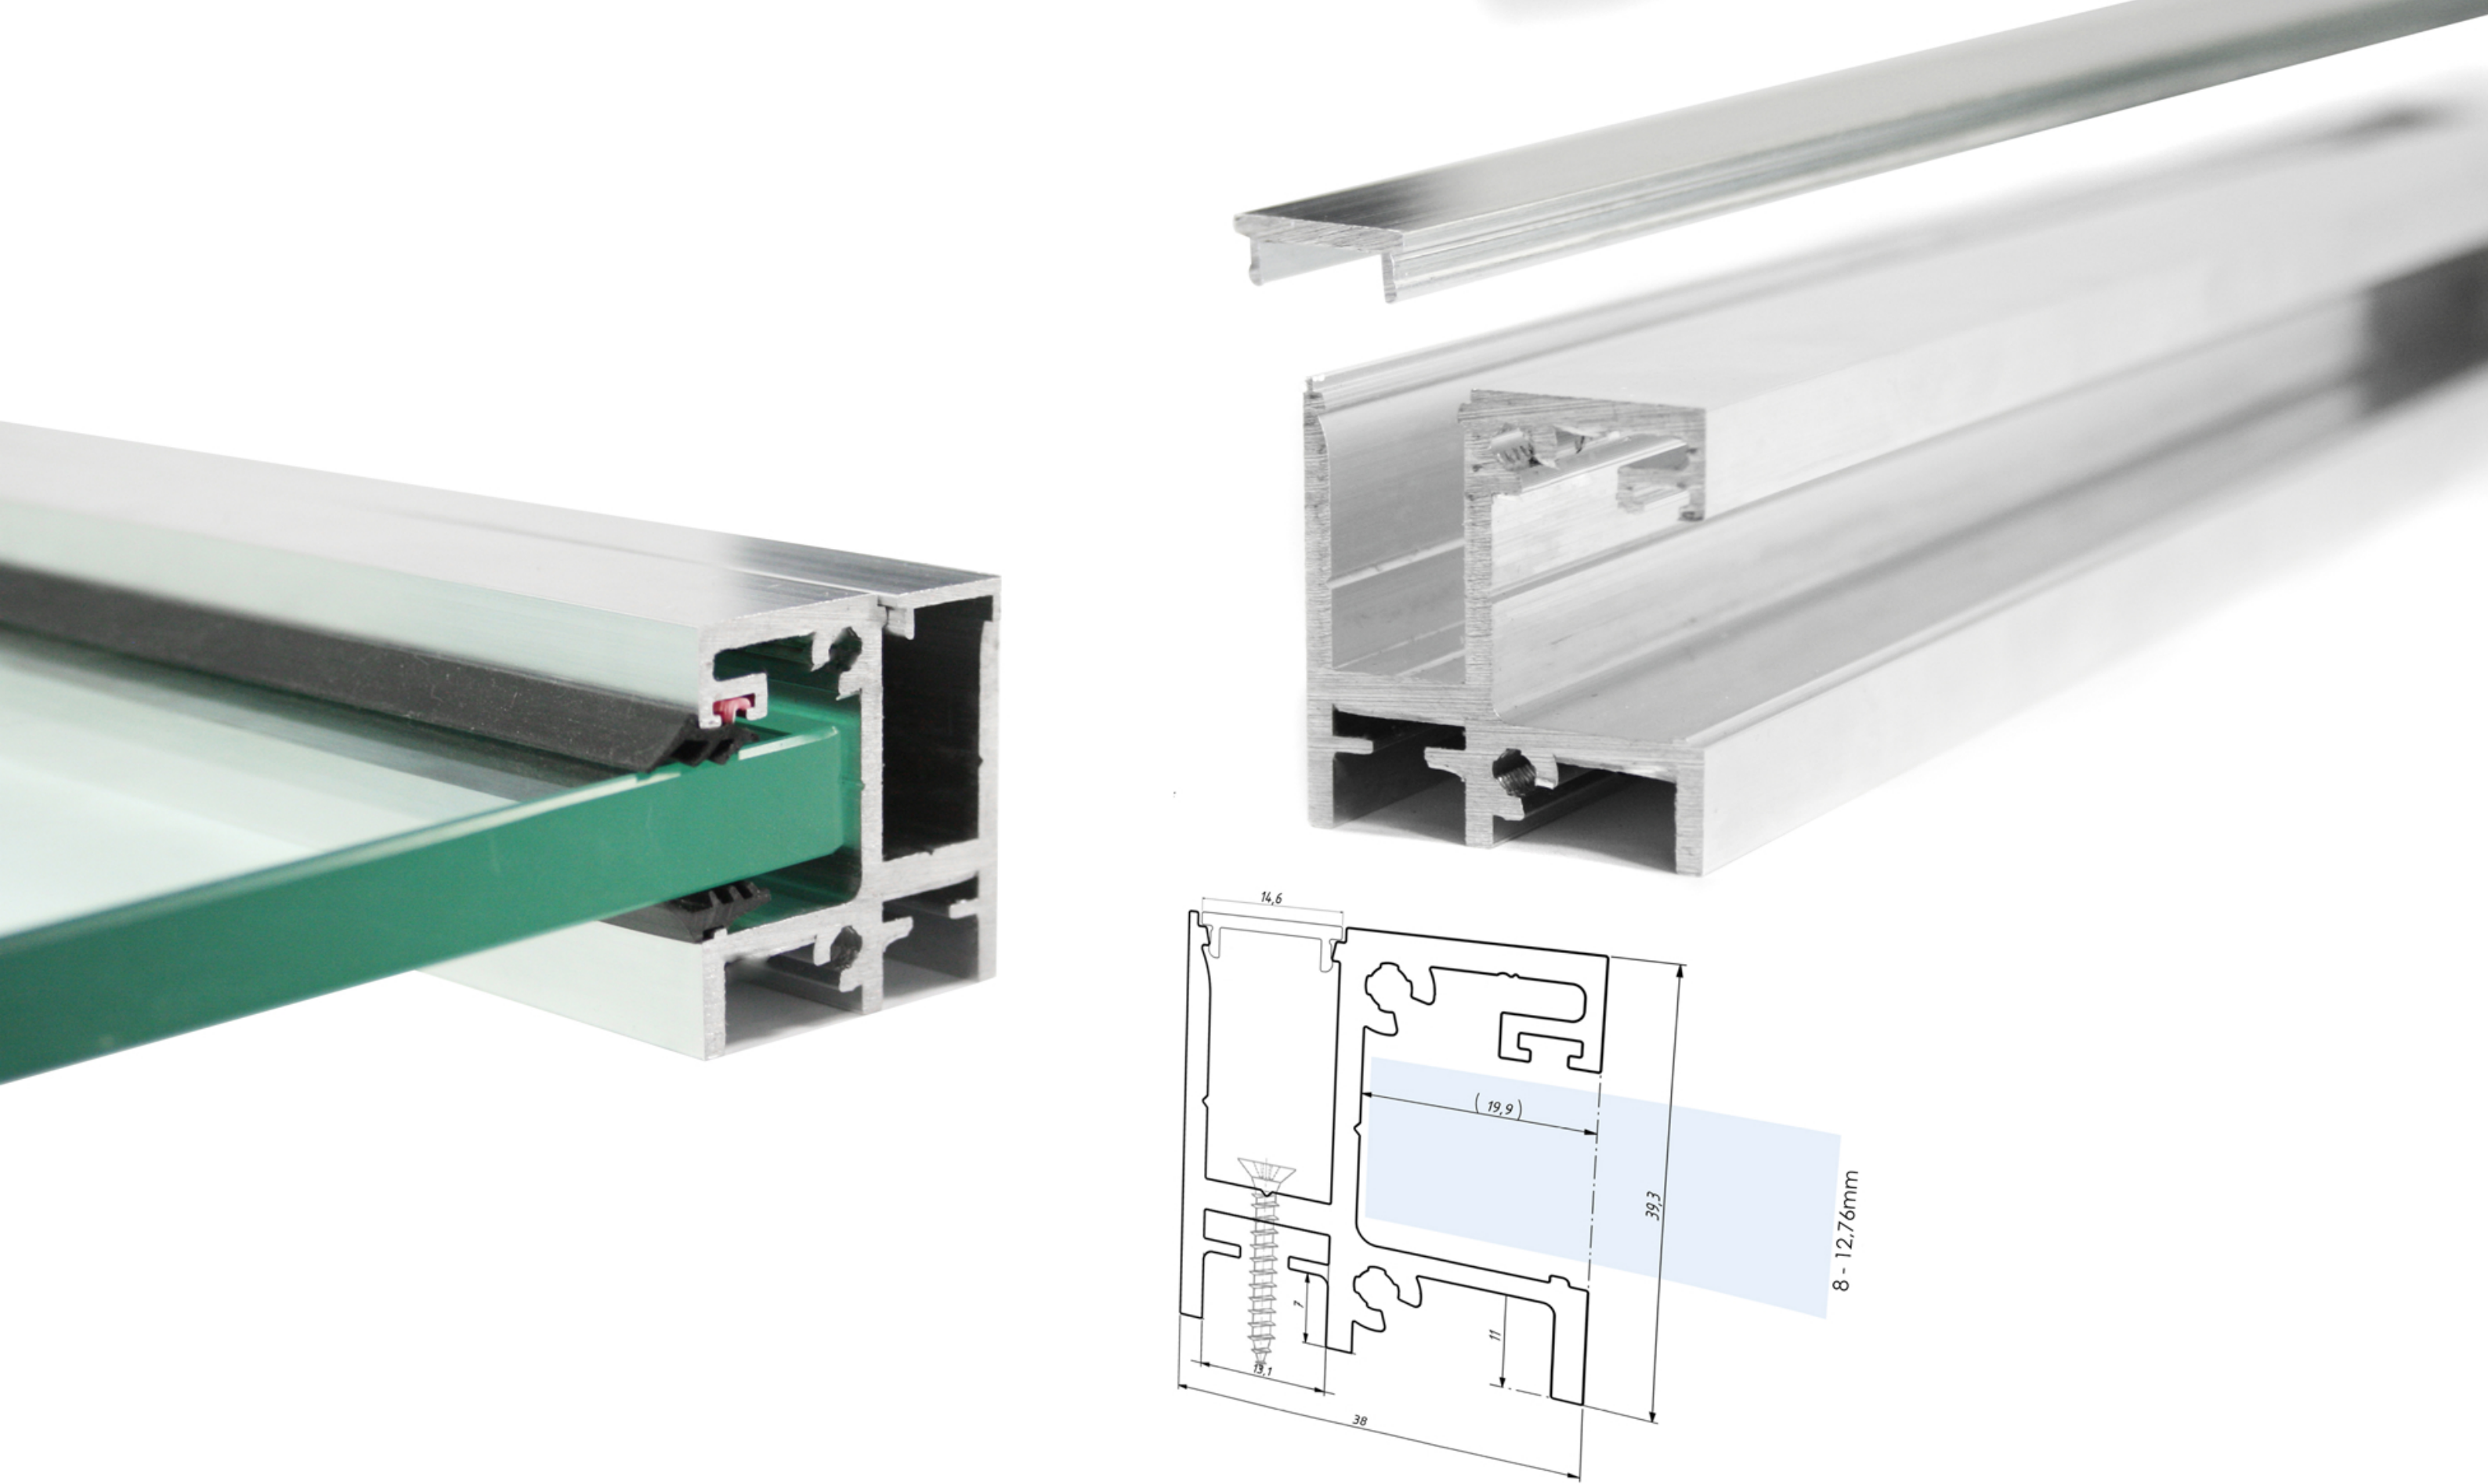
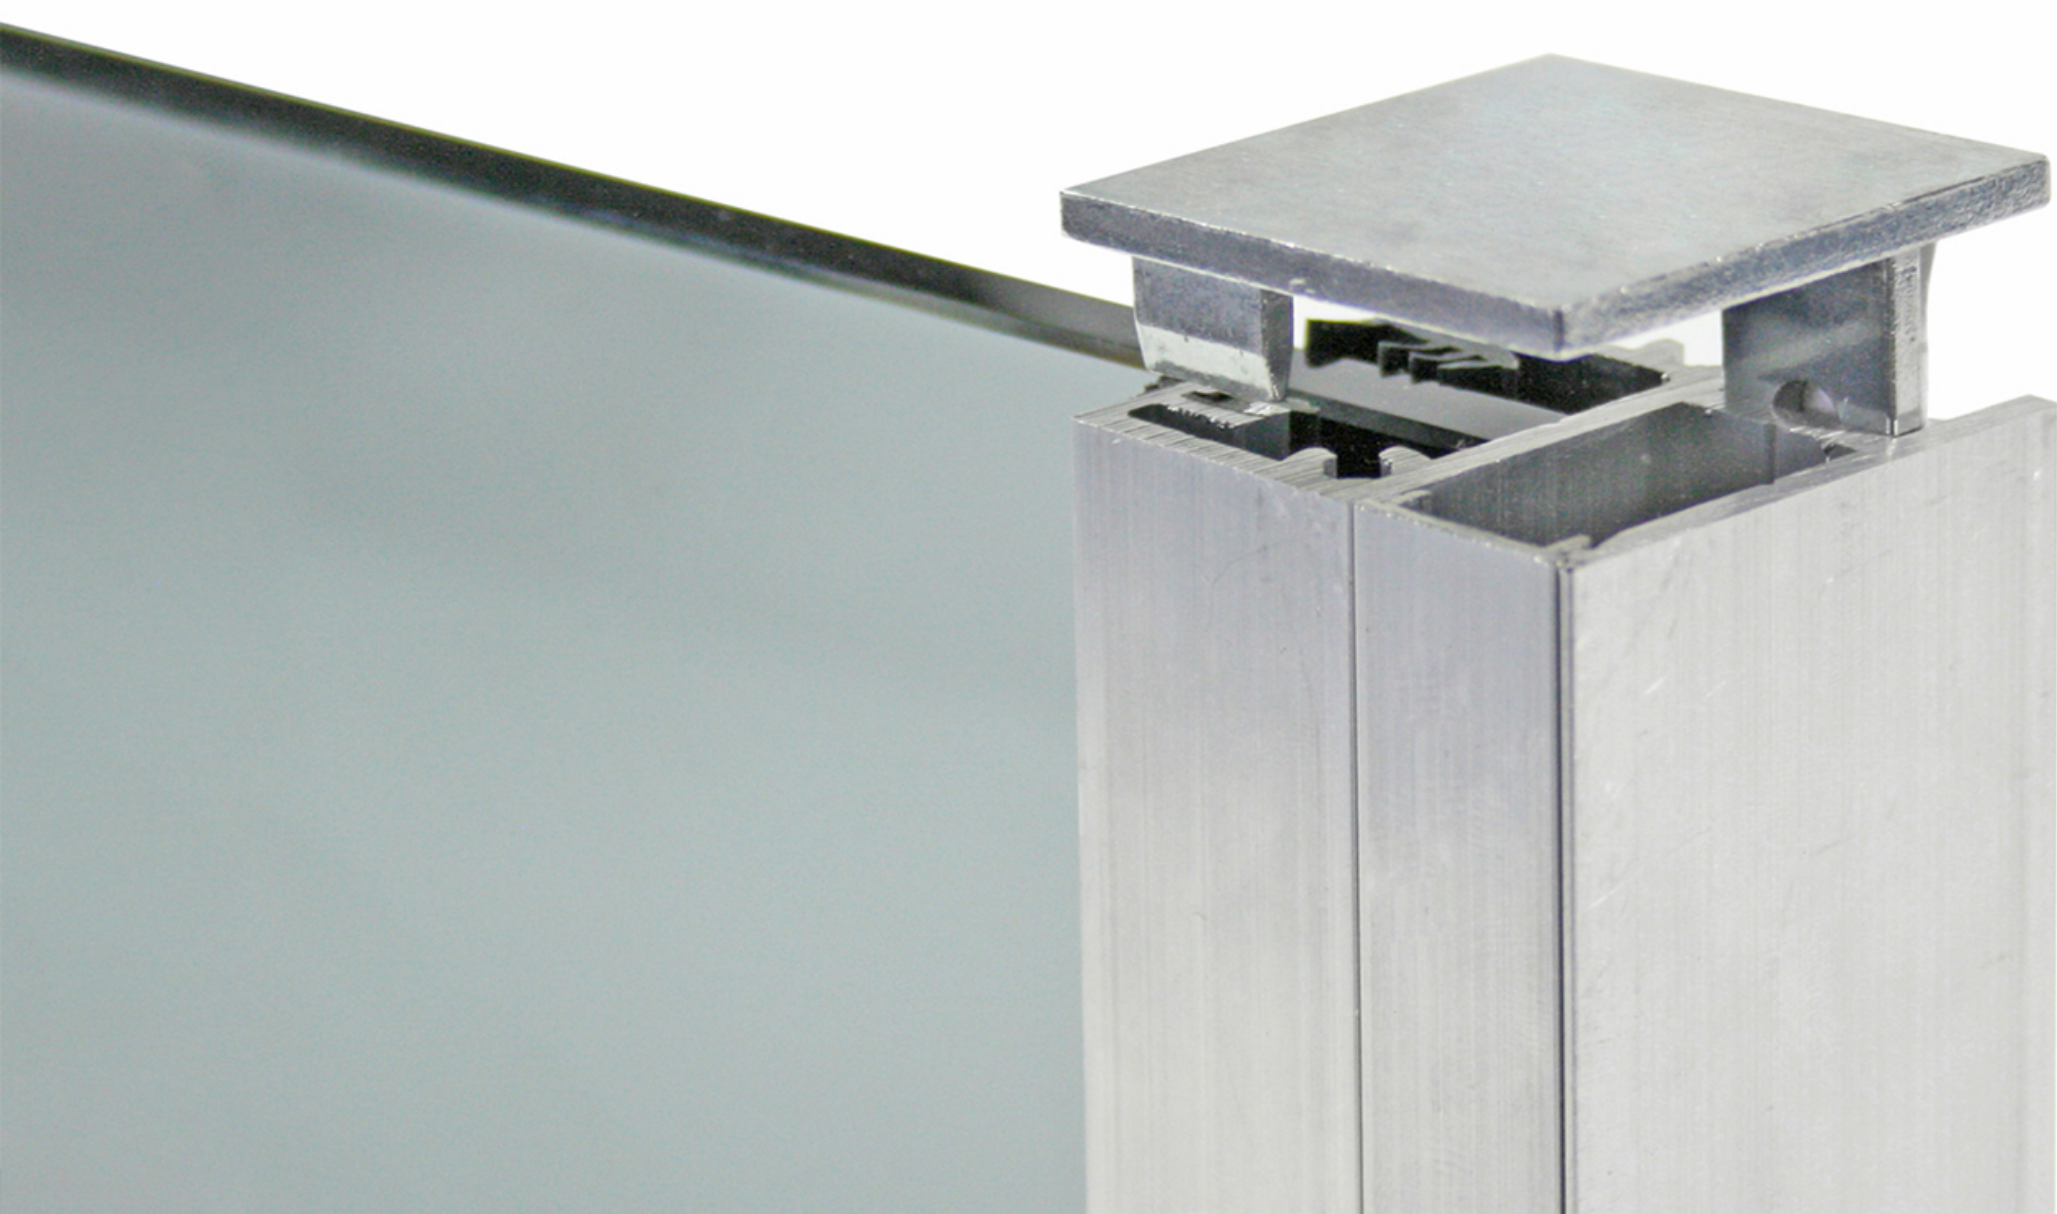
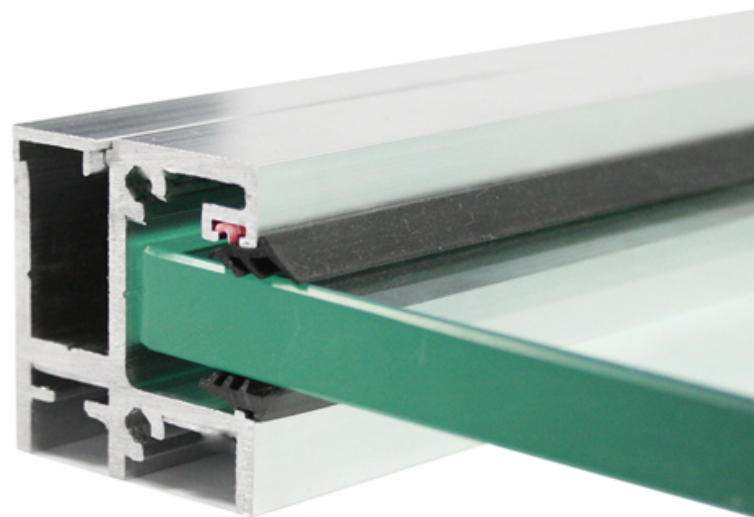
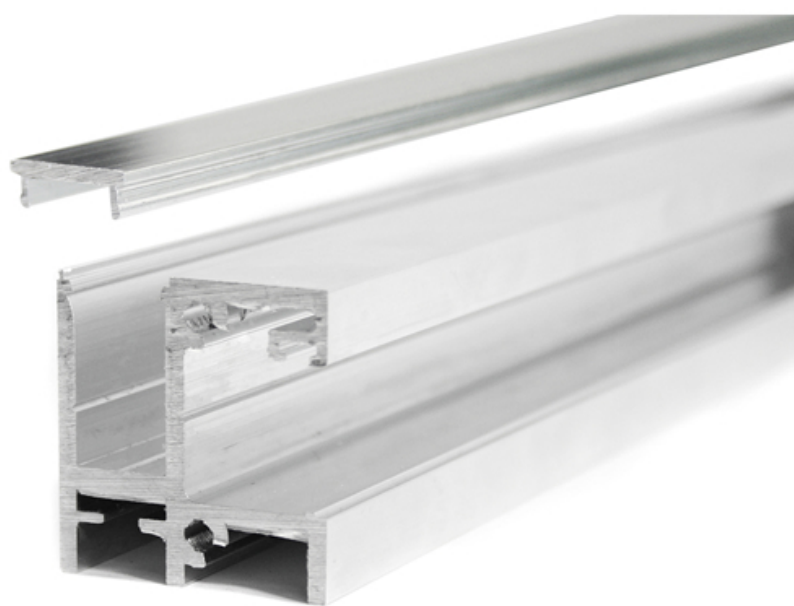


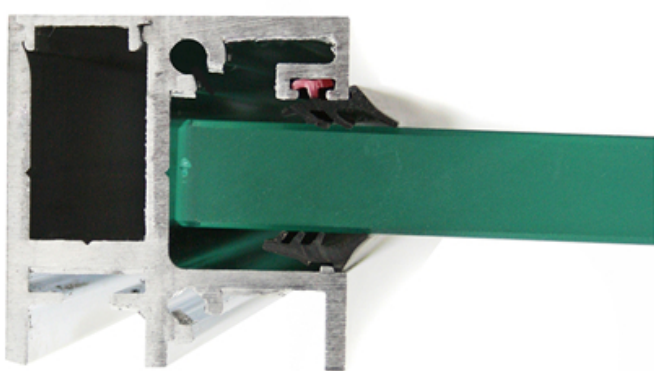

Set of profiles mounted to the window frame

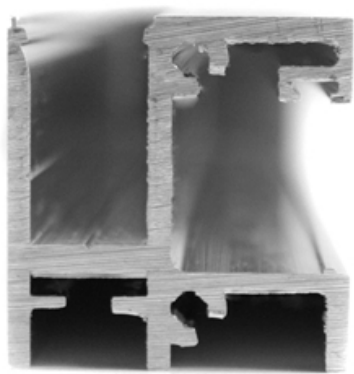


TECHNICAL DATA

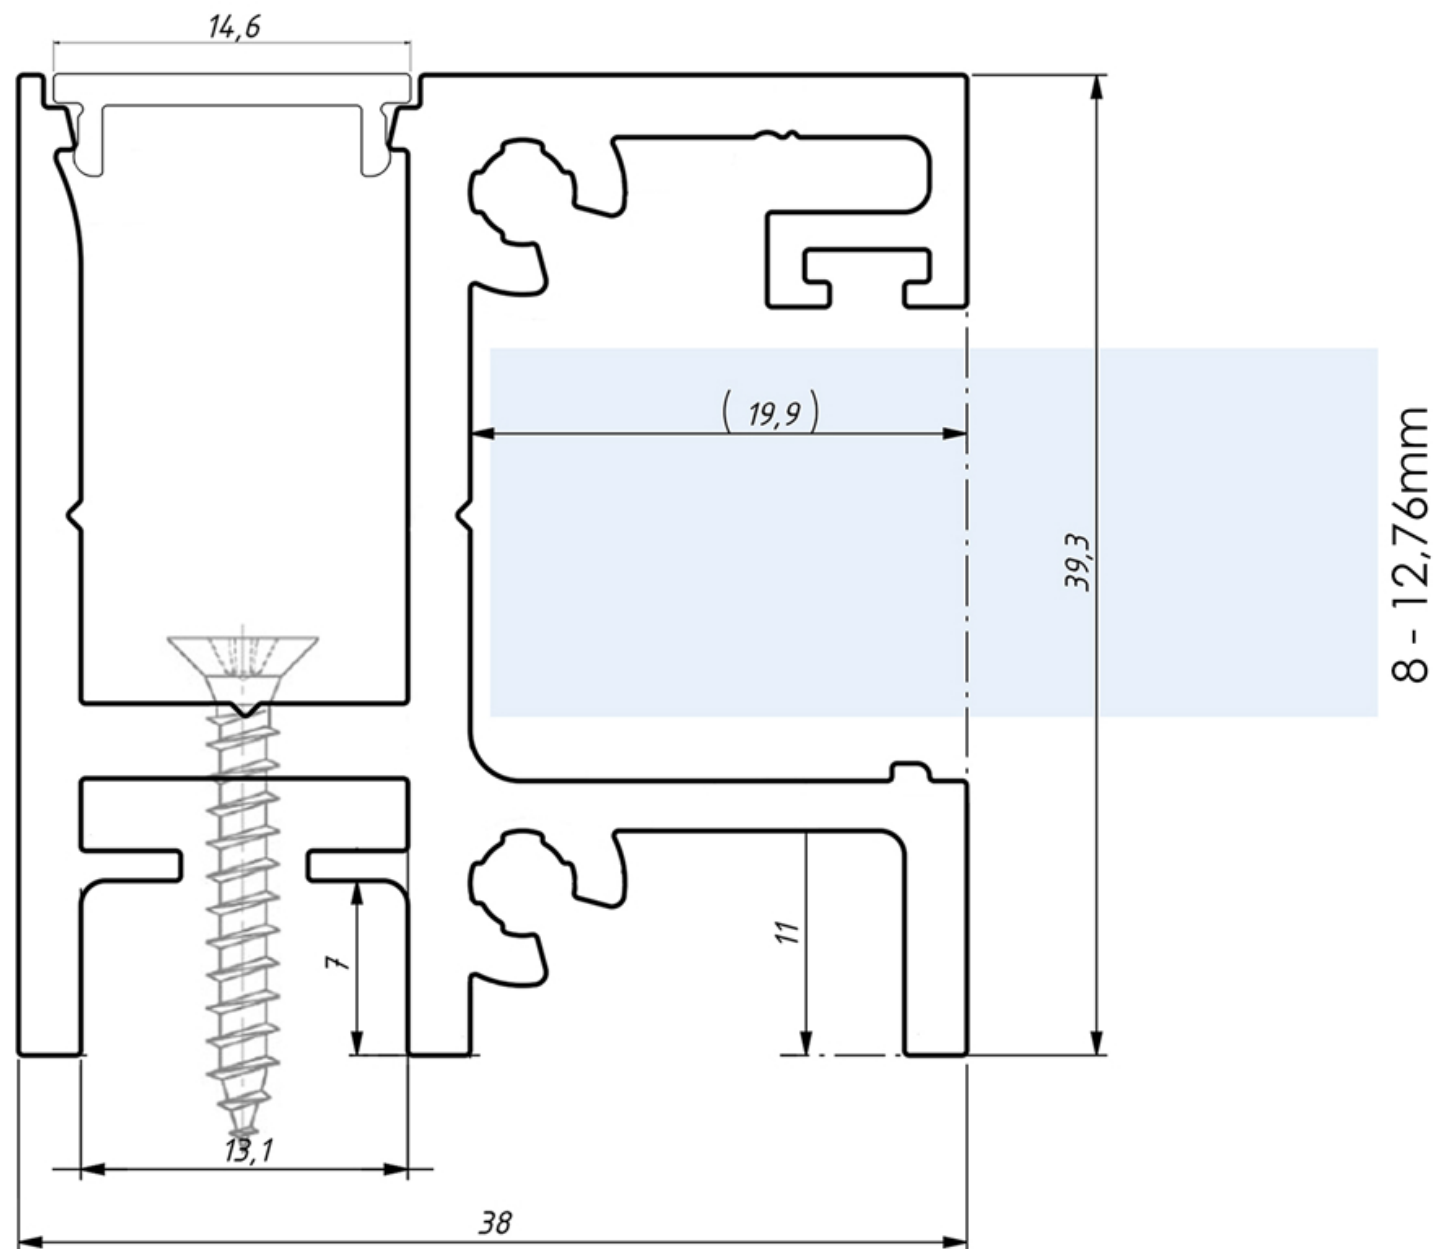


TECHNICAL DATA

Glass thickness 8 - 8.76mm






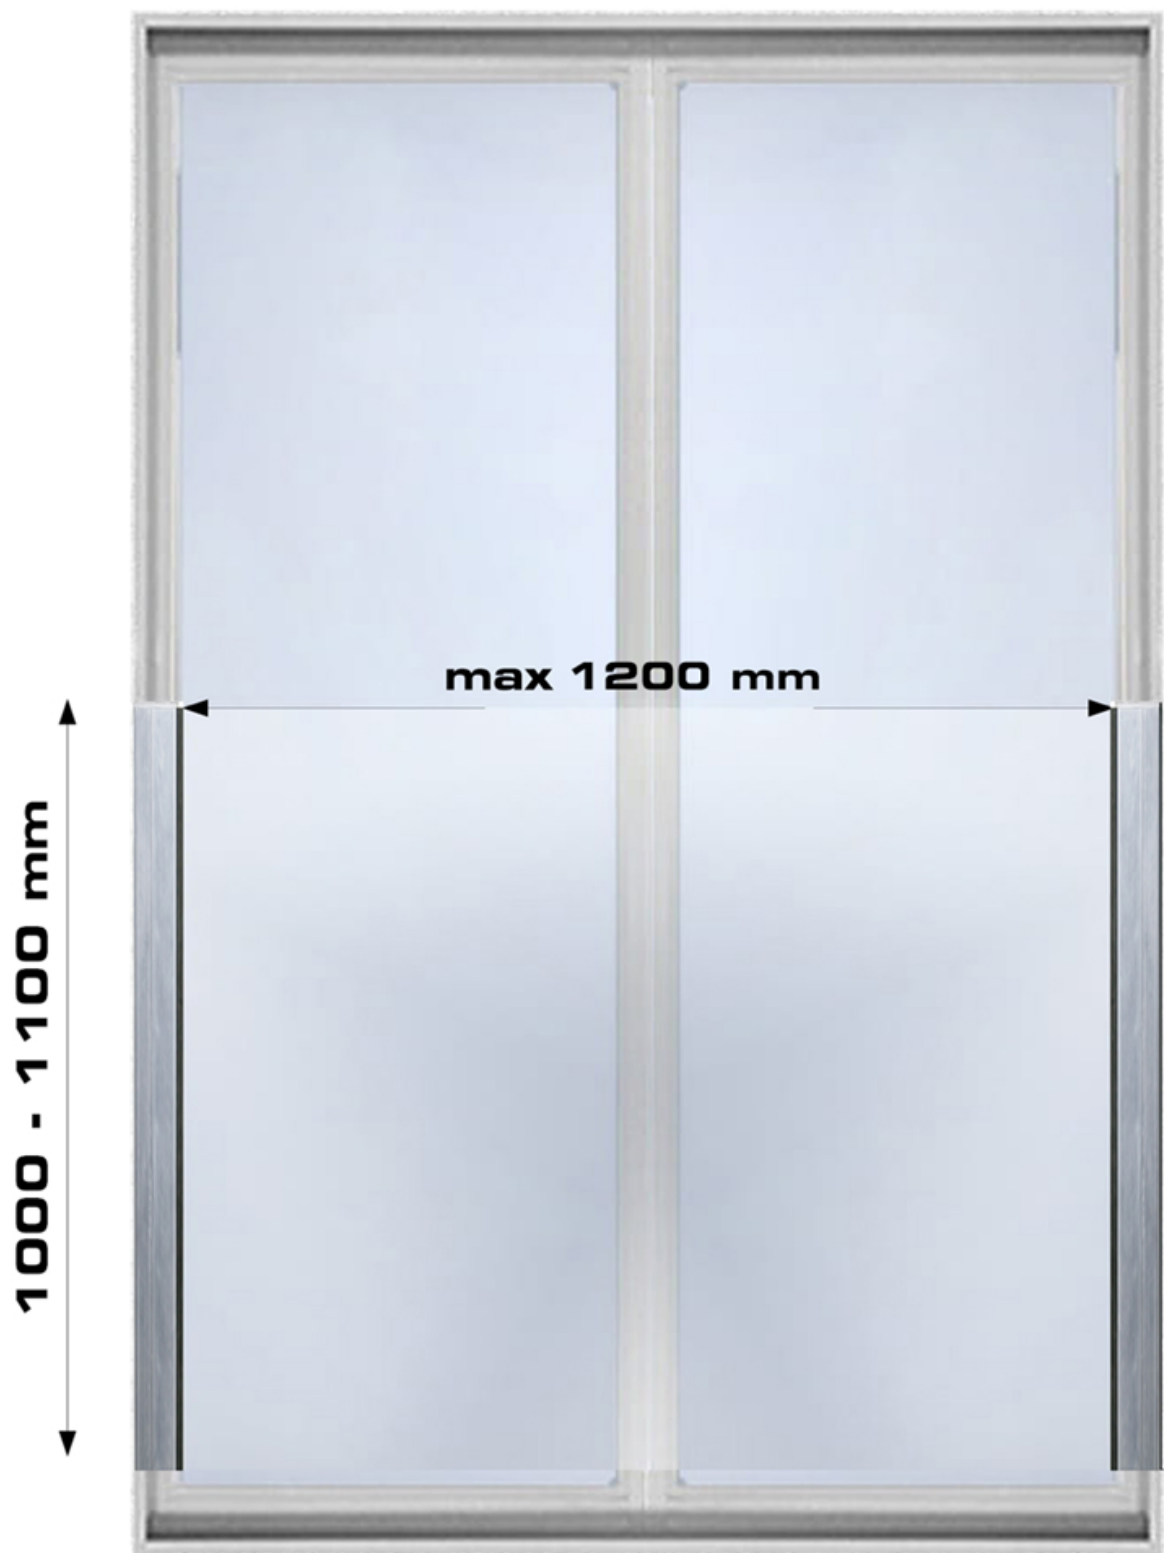


Glass thickness 10 - 10.76mm

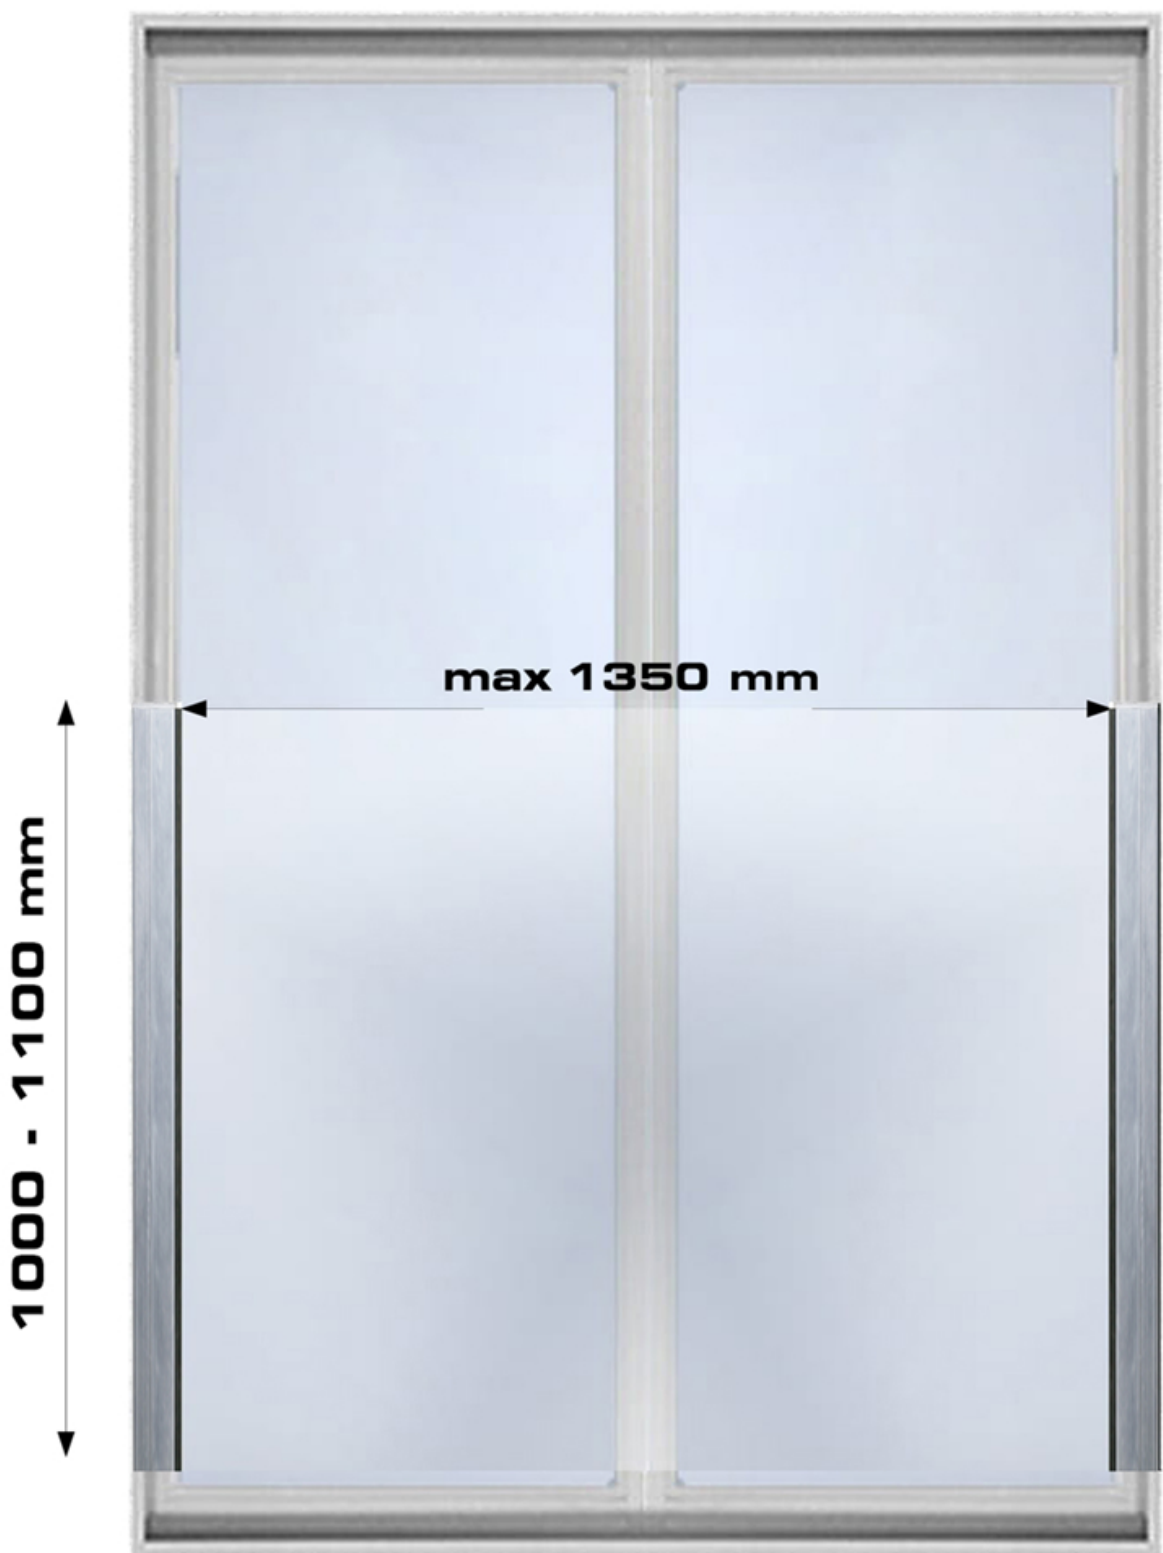


TECHNICAL DATA

Glass thickness 12 - 12.76mm

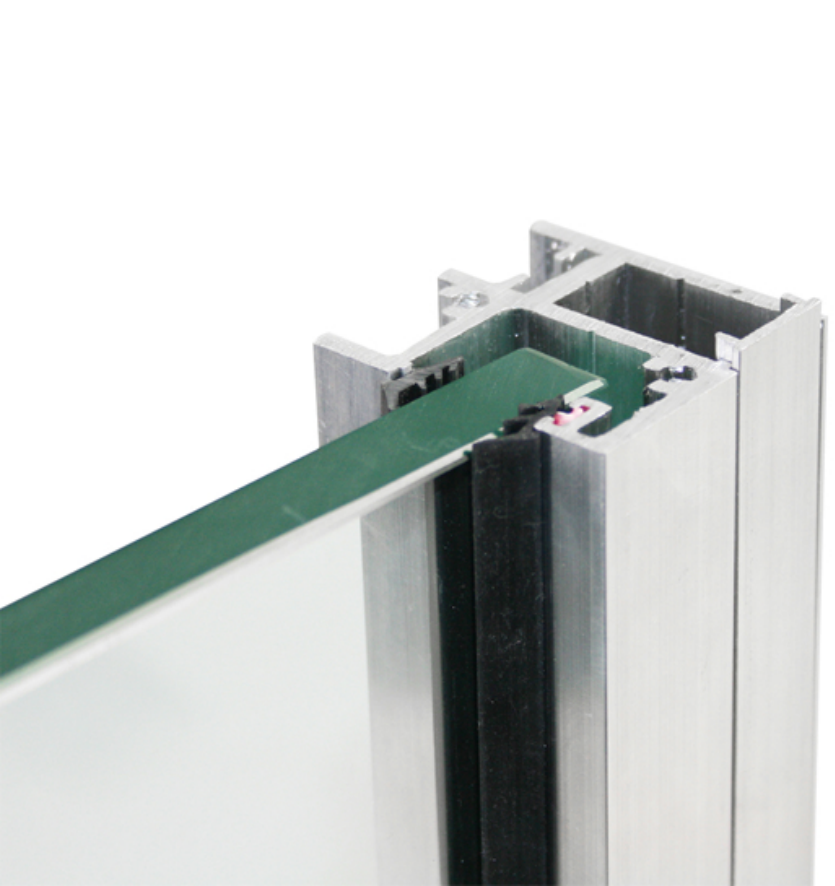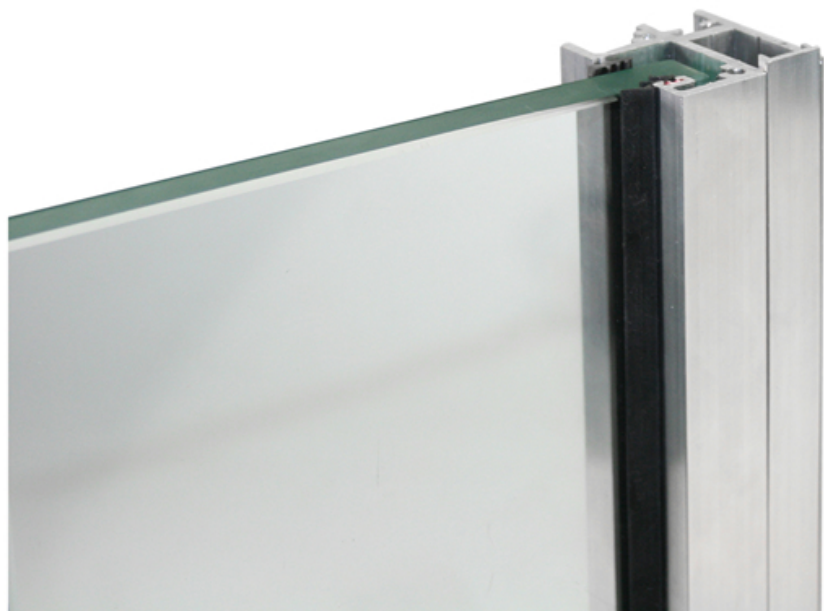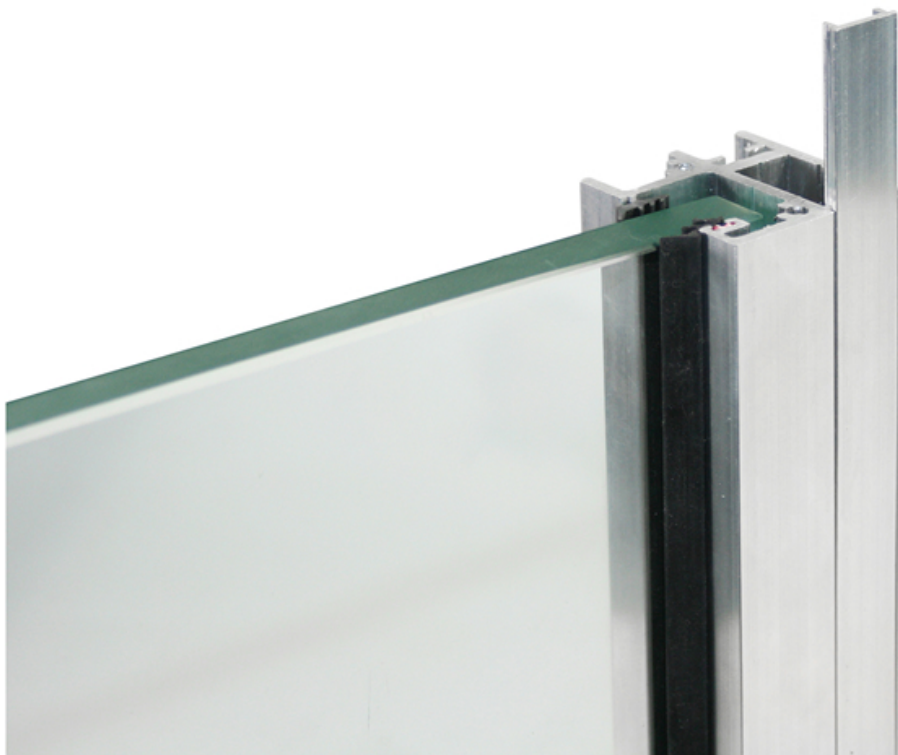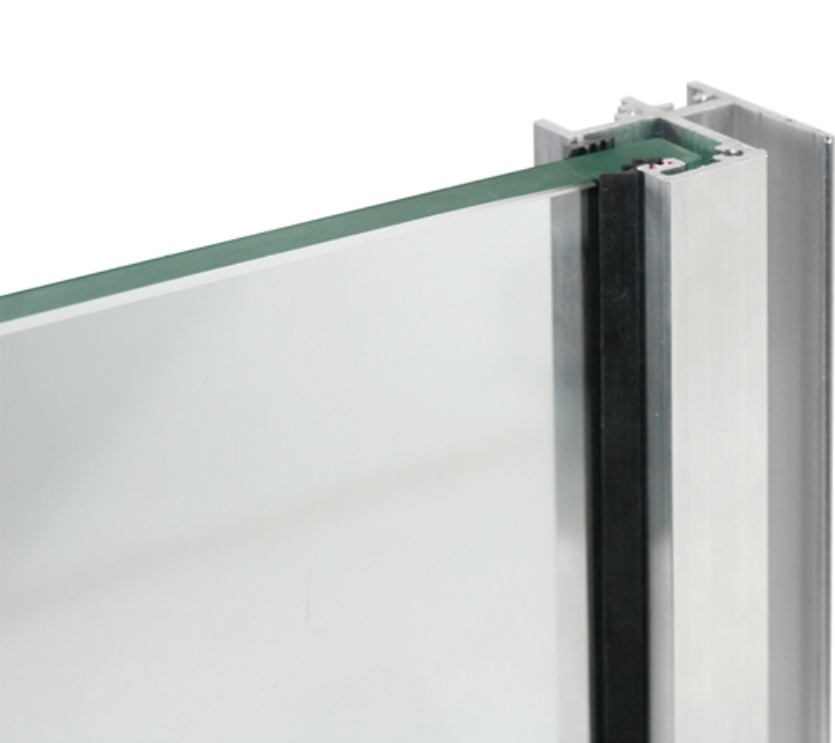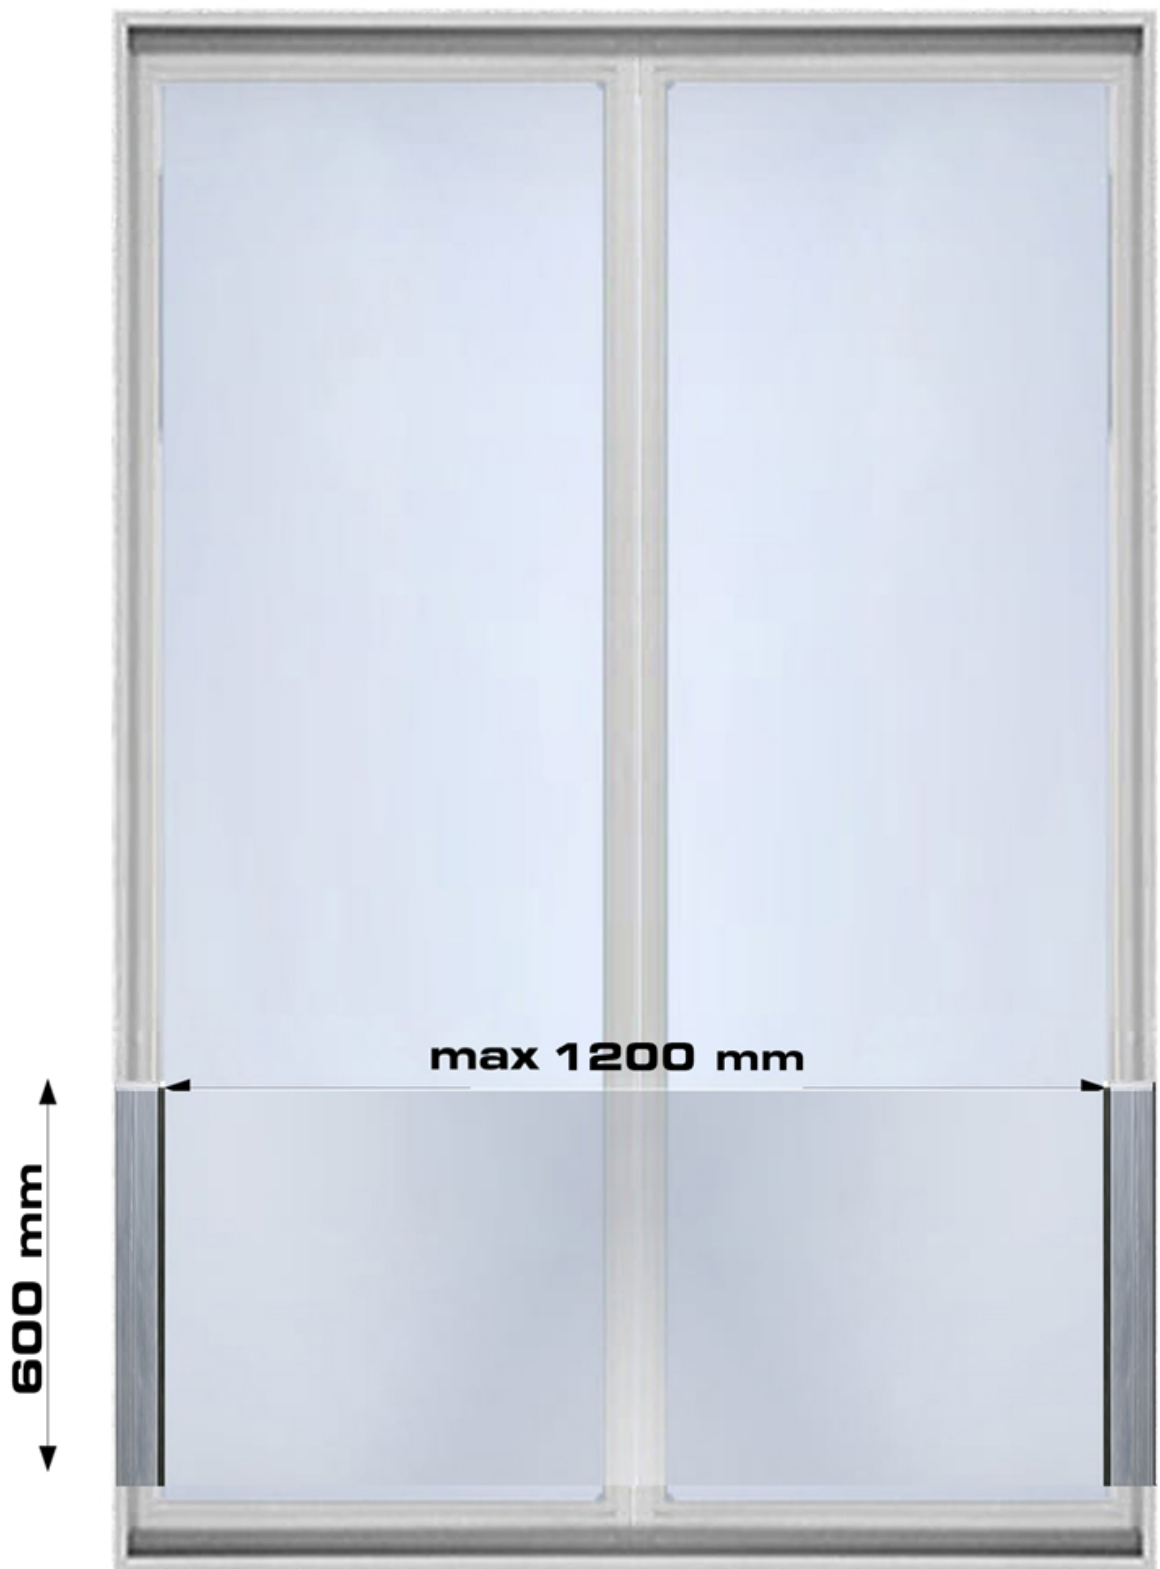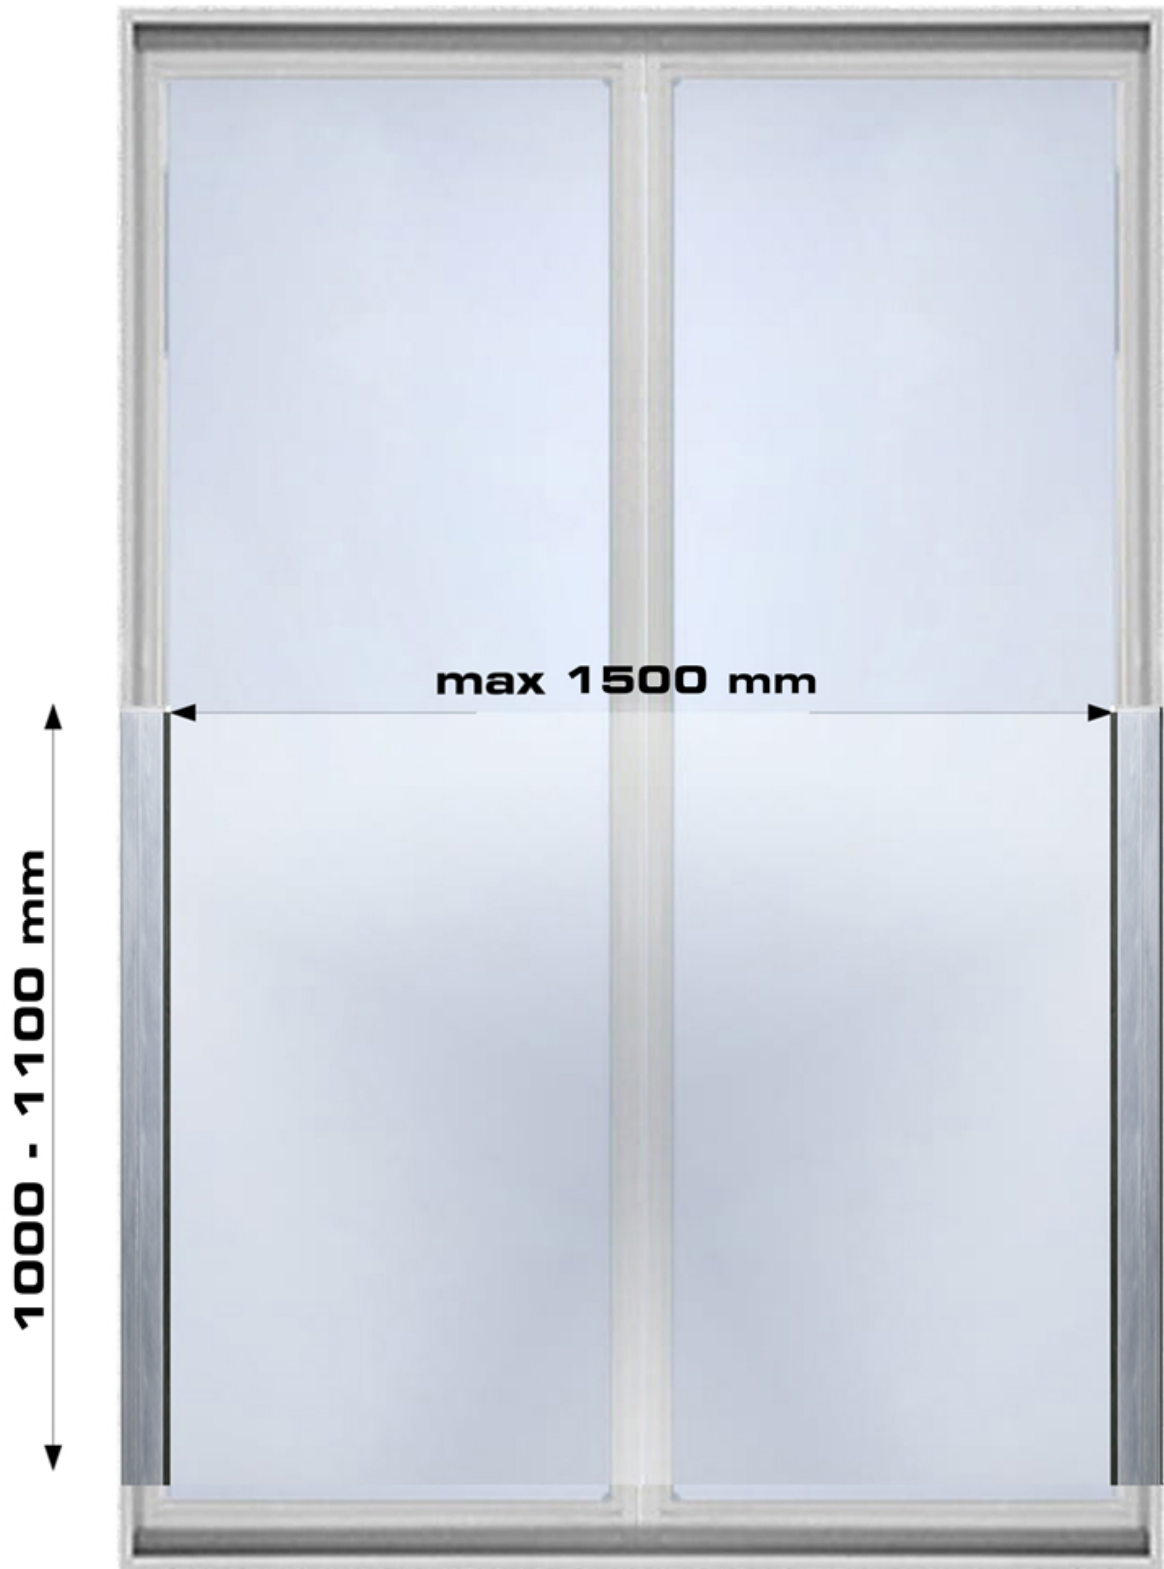

TECHNICAL DATA


ALUMINIUM FRAME

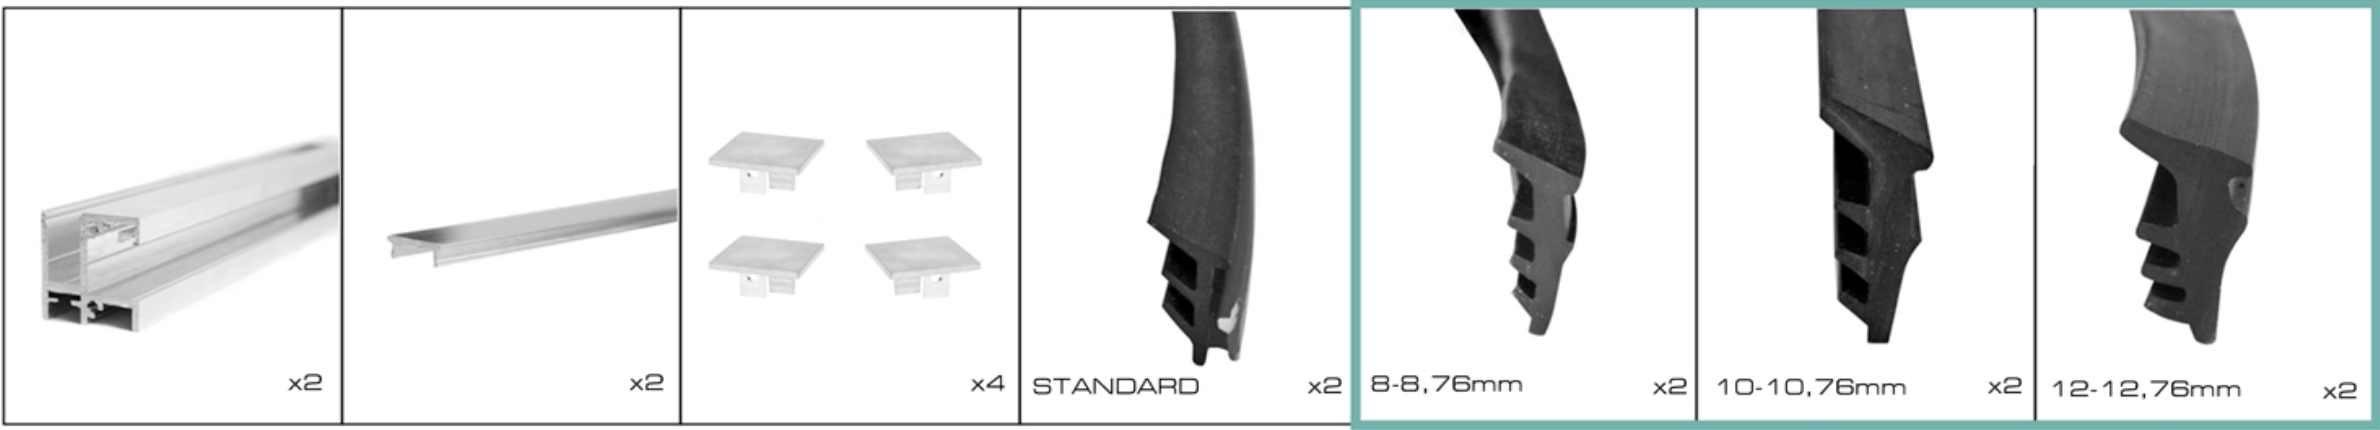

SCREWS




TOOLS





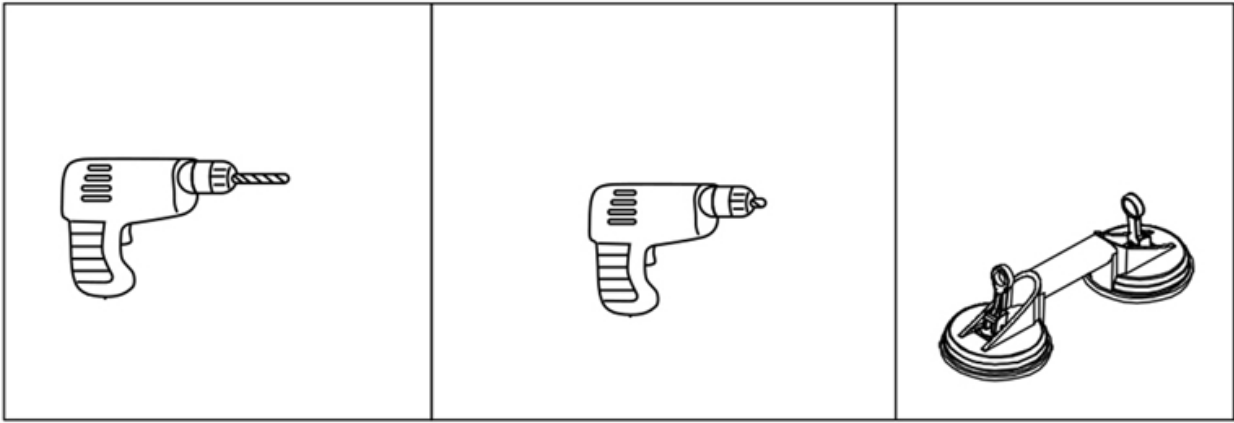


1

Before screwing the profiles to the window frame, you need to screw bottom caps.



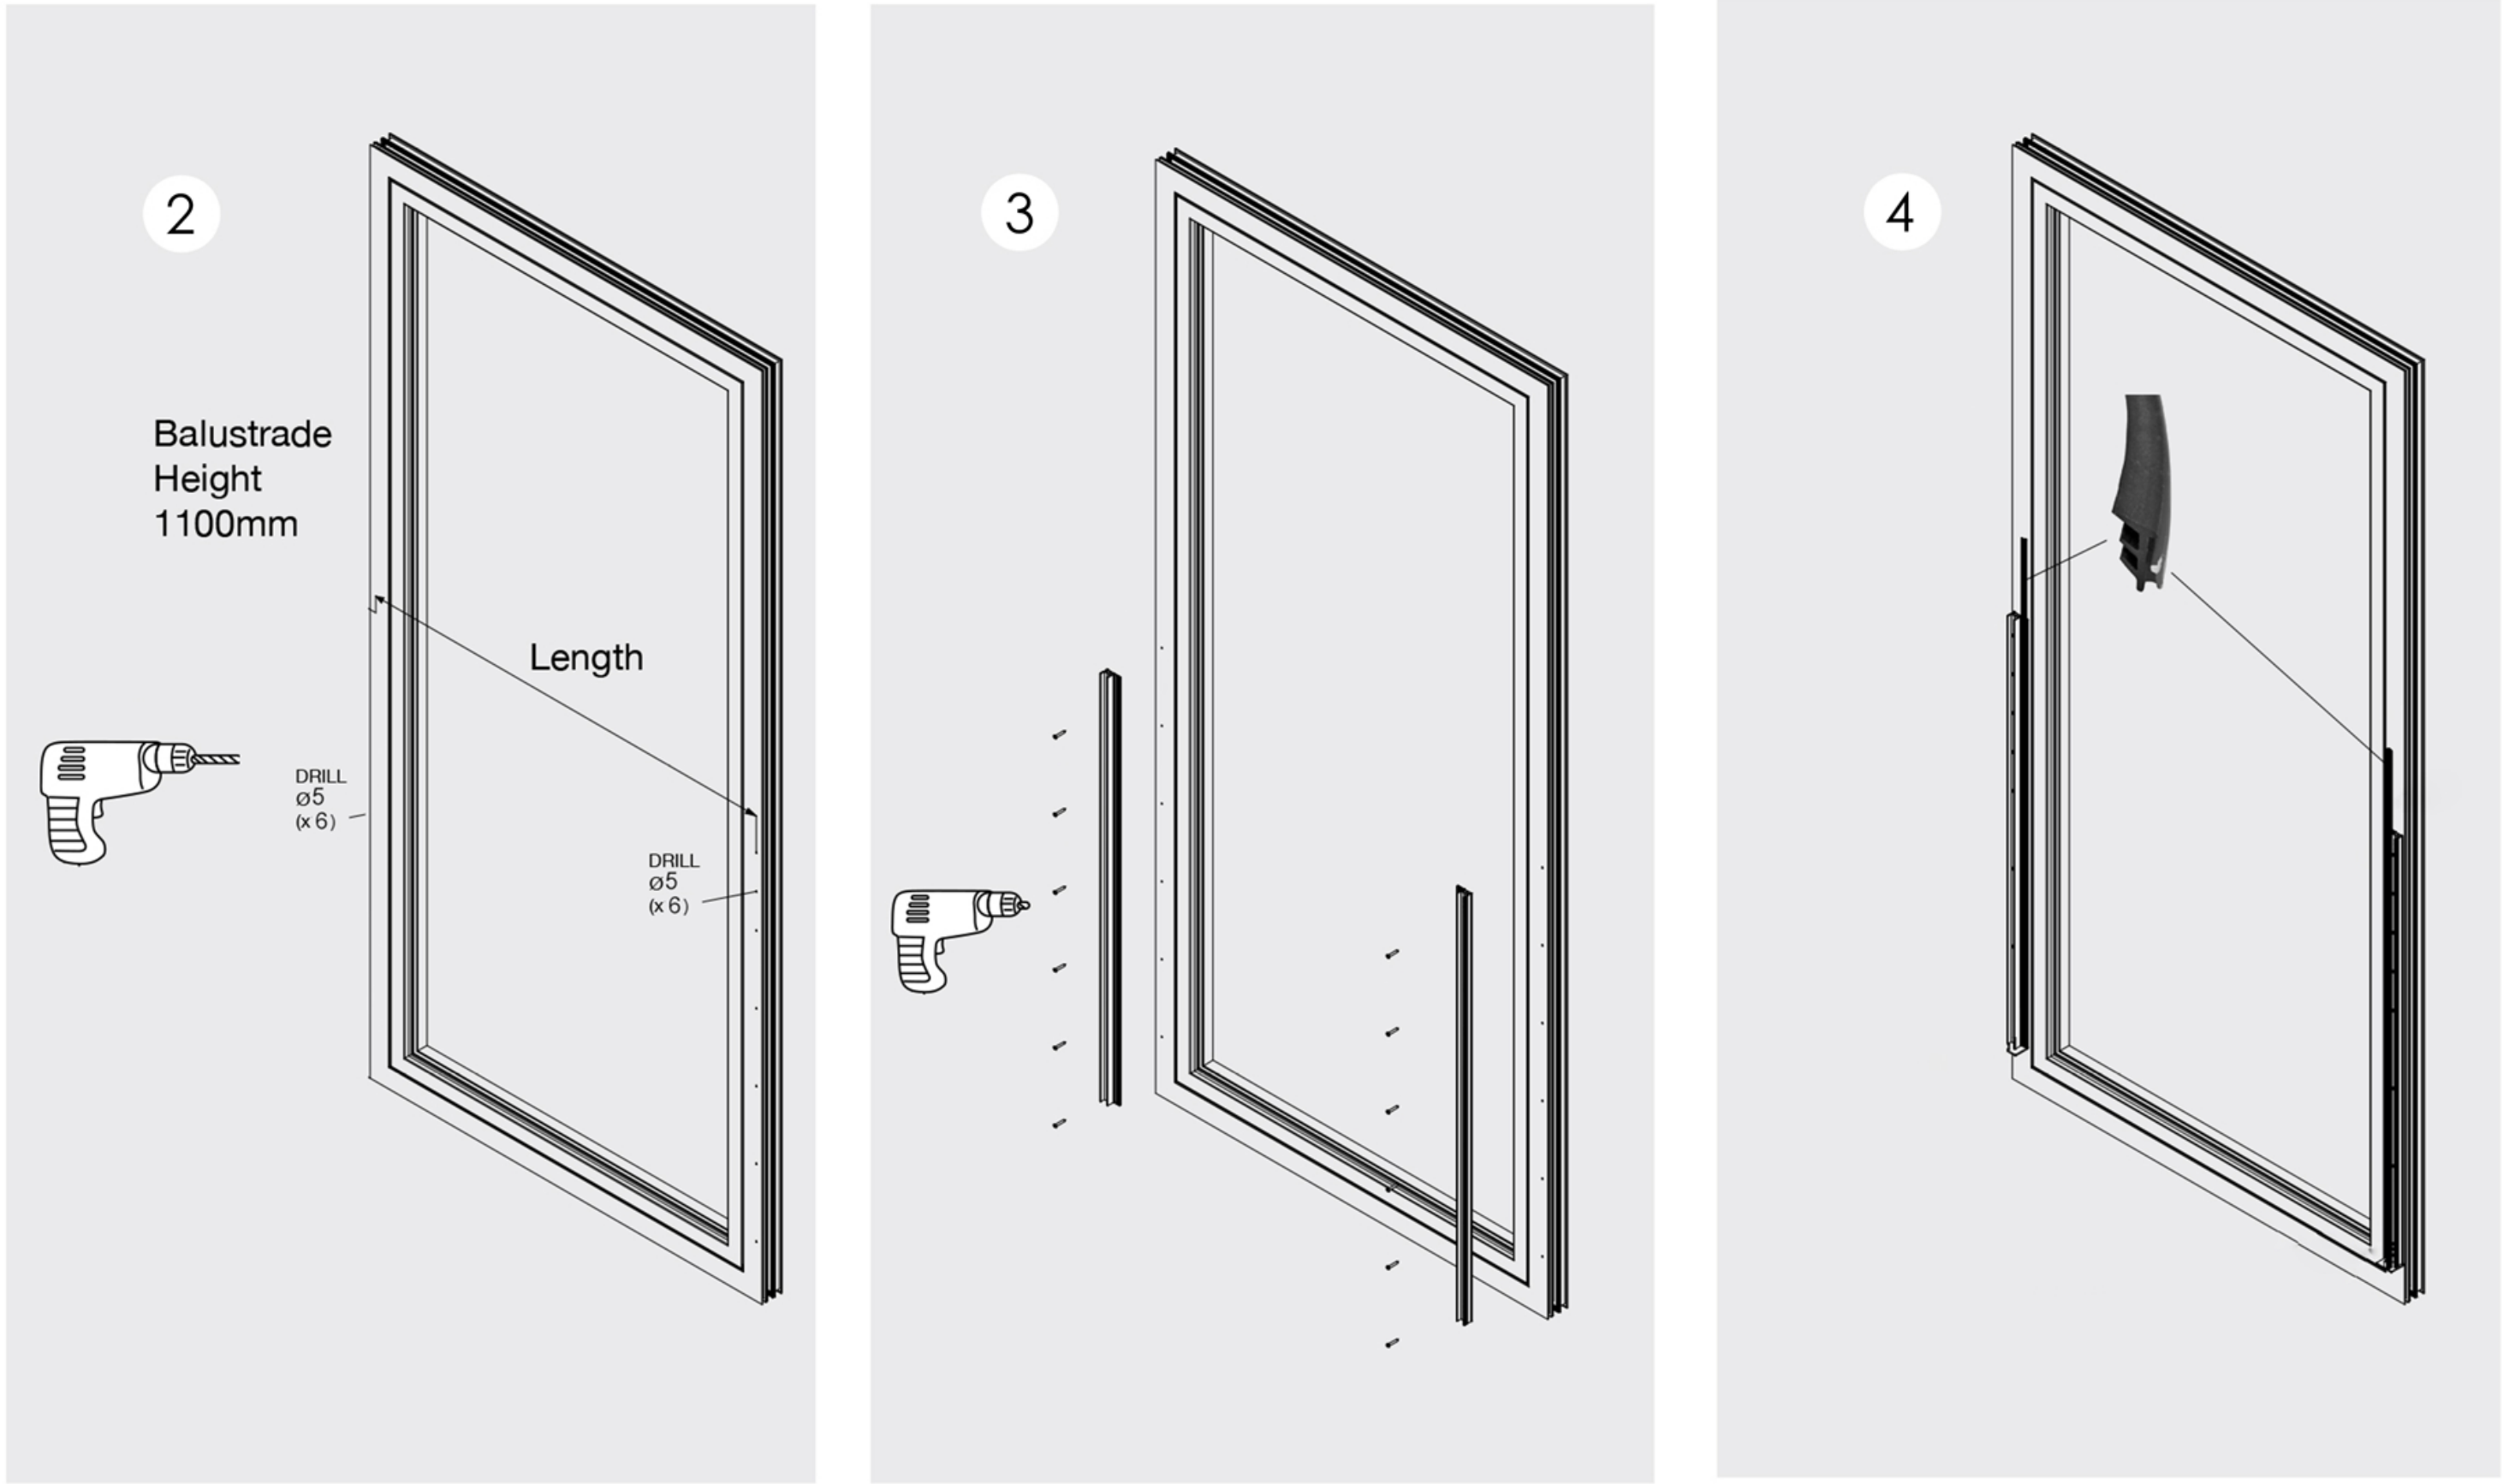


TECHNICAL DATA

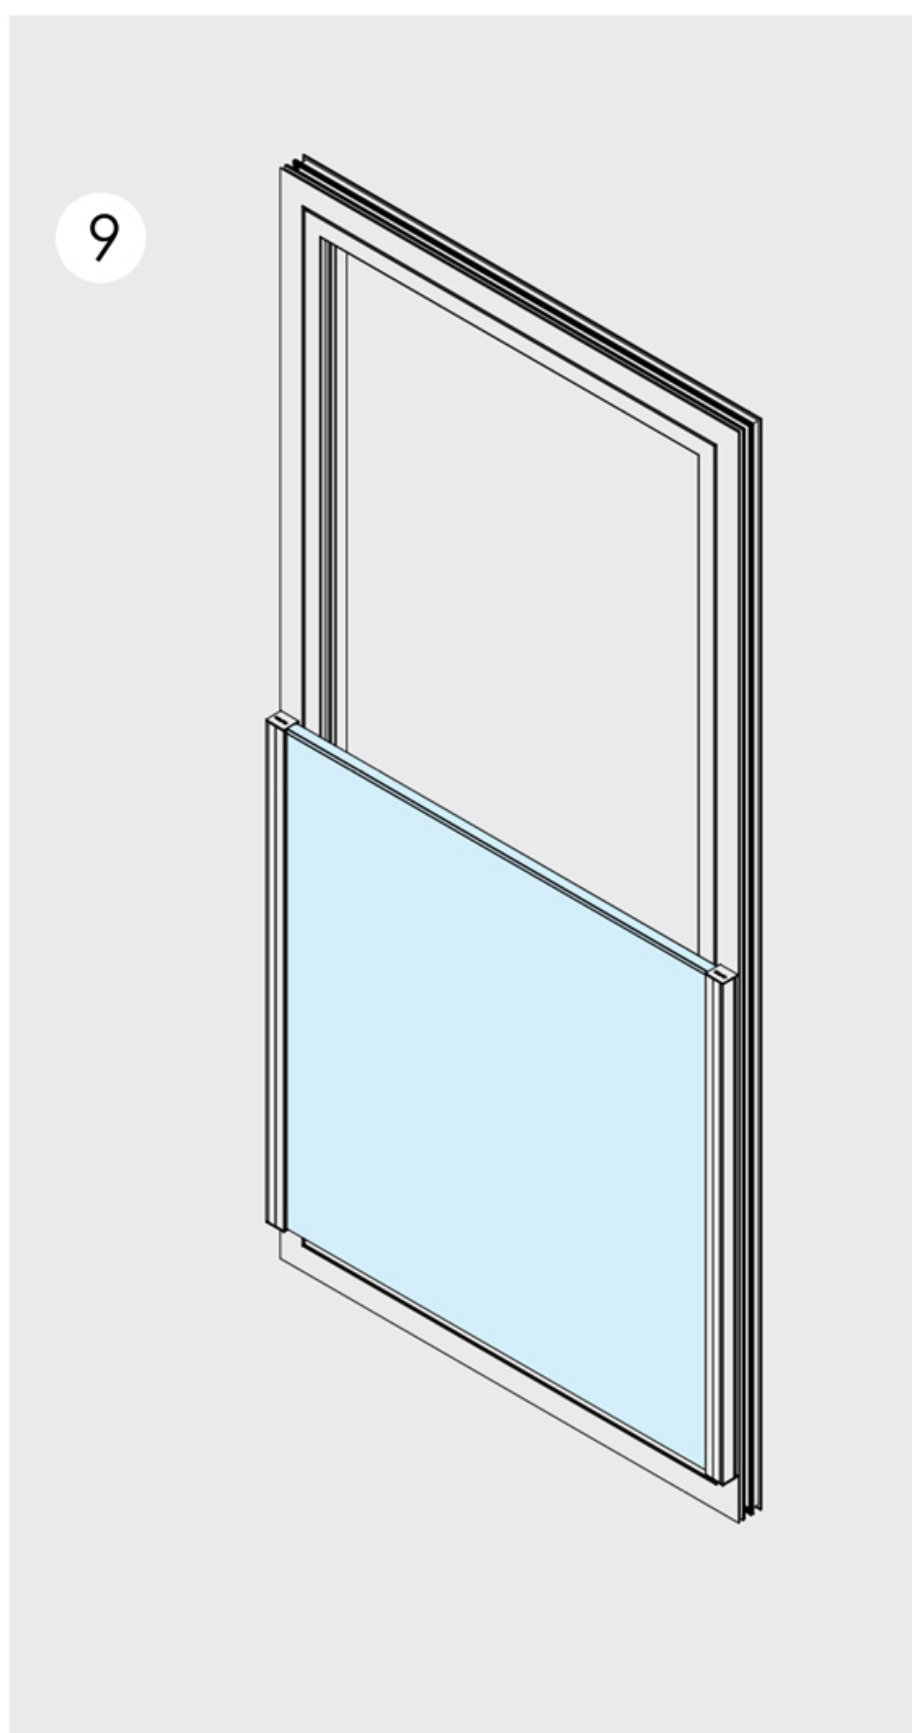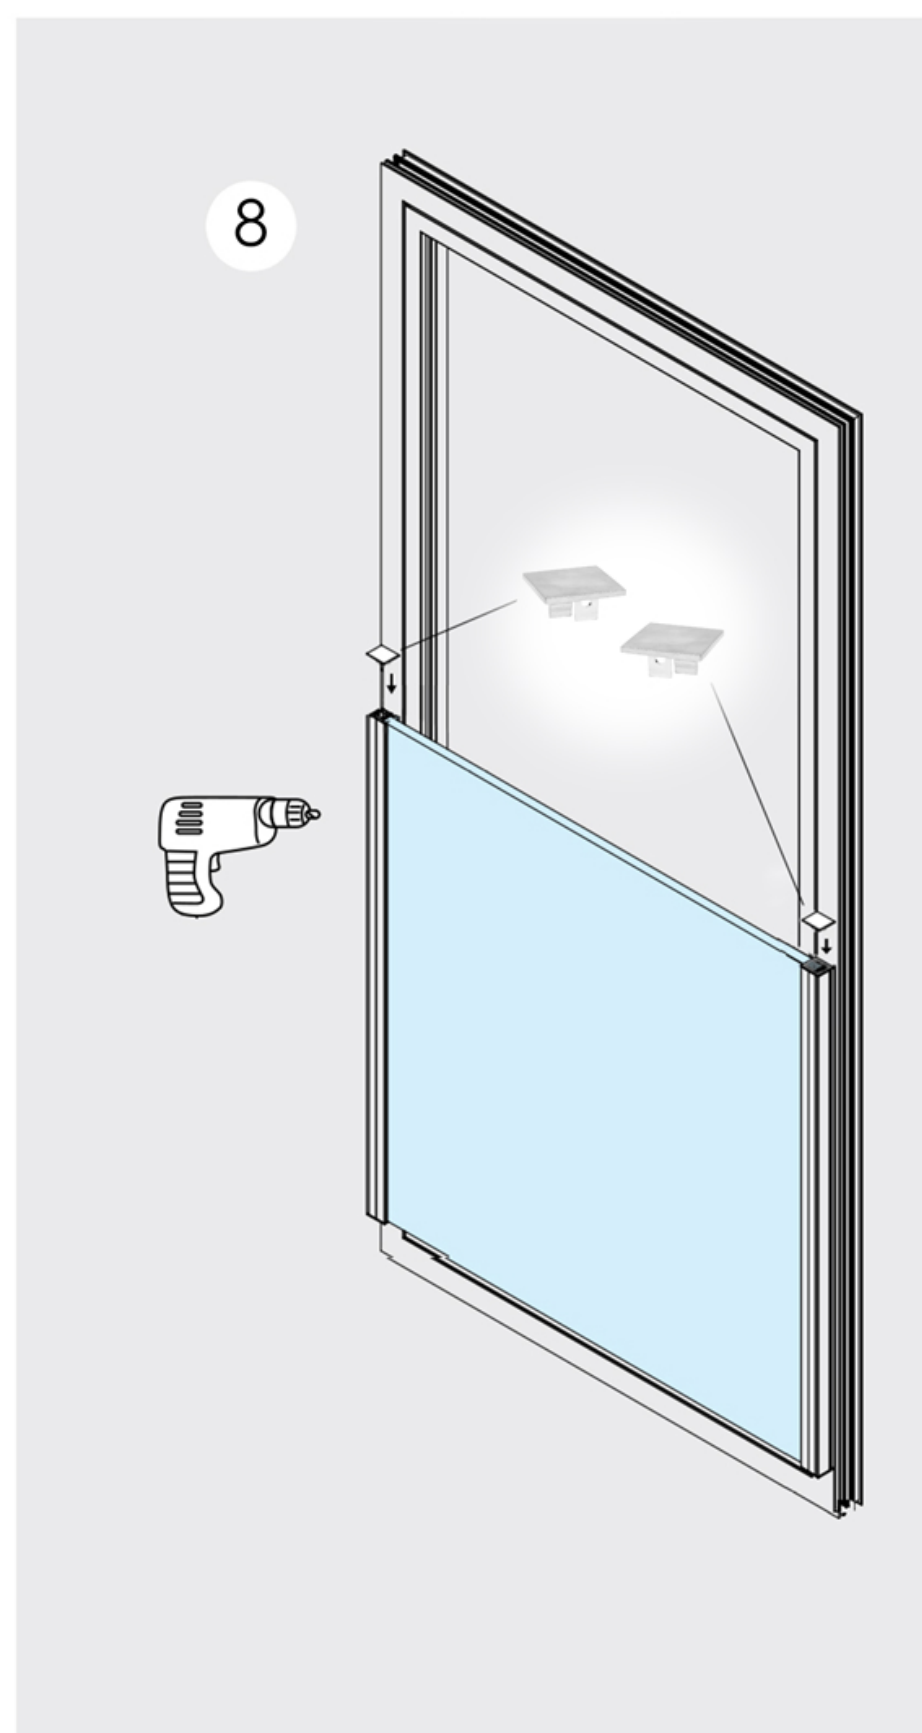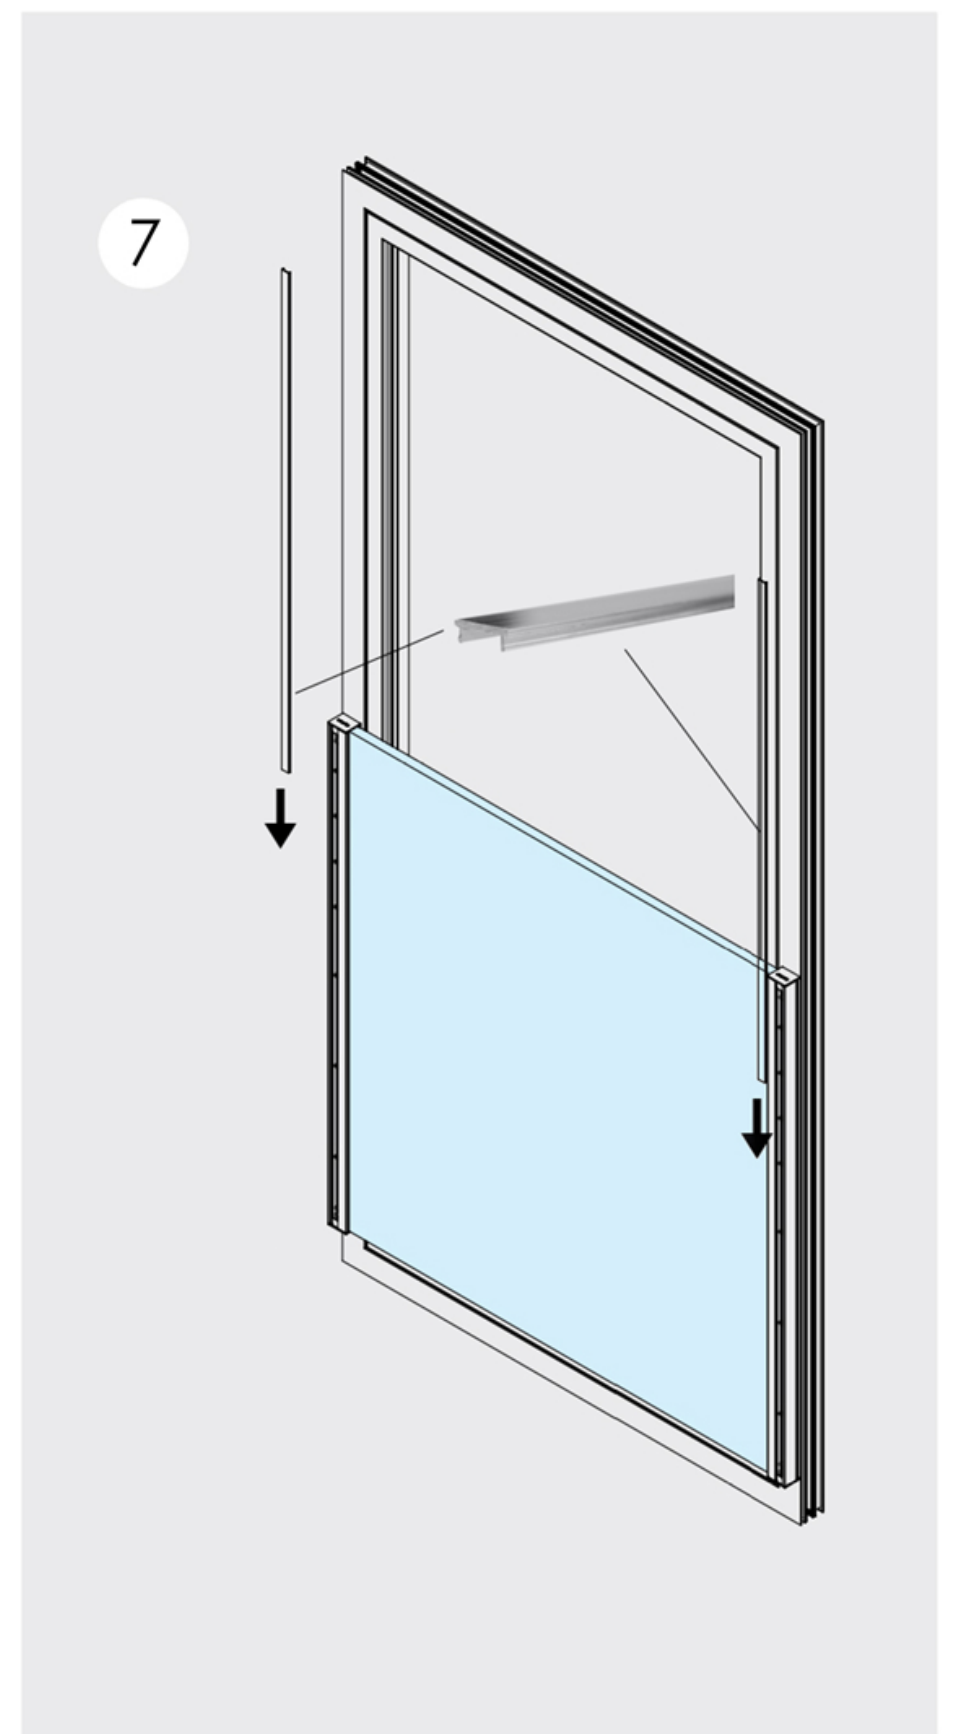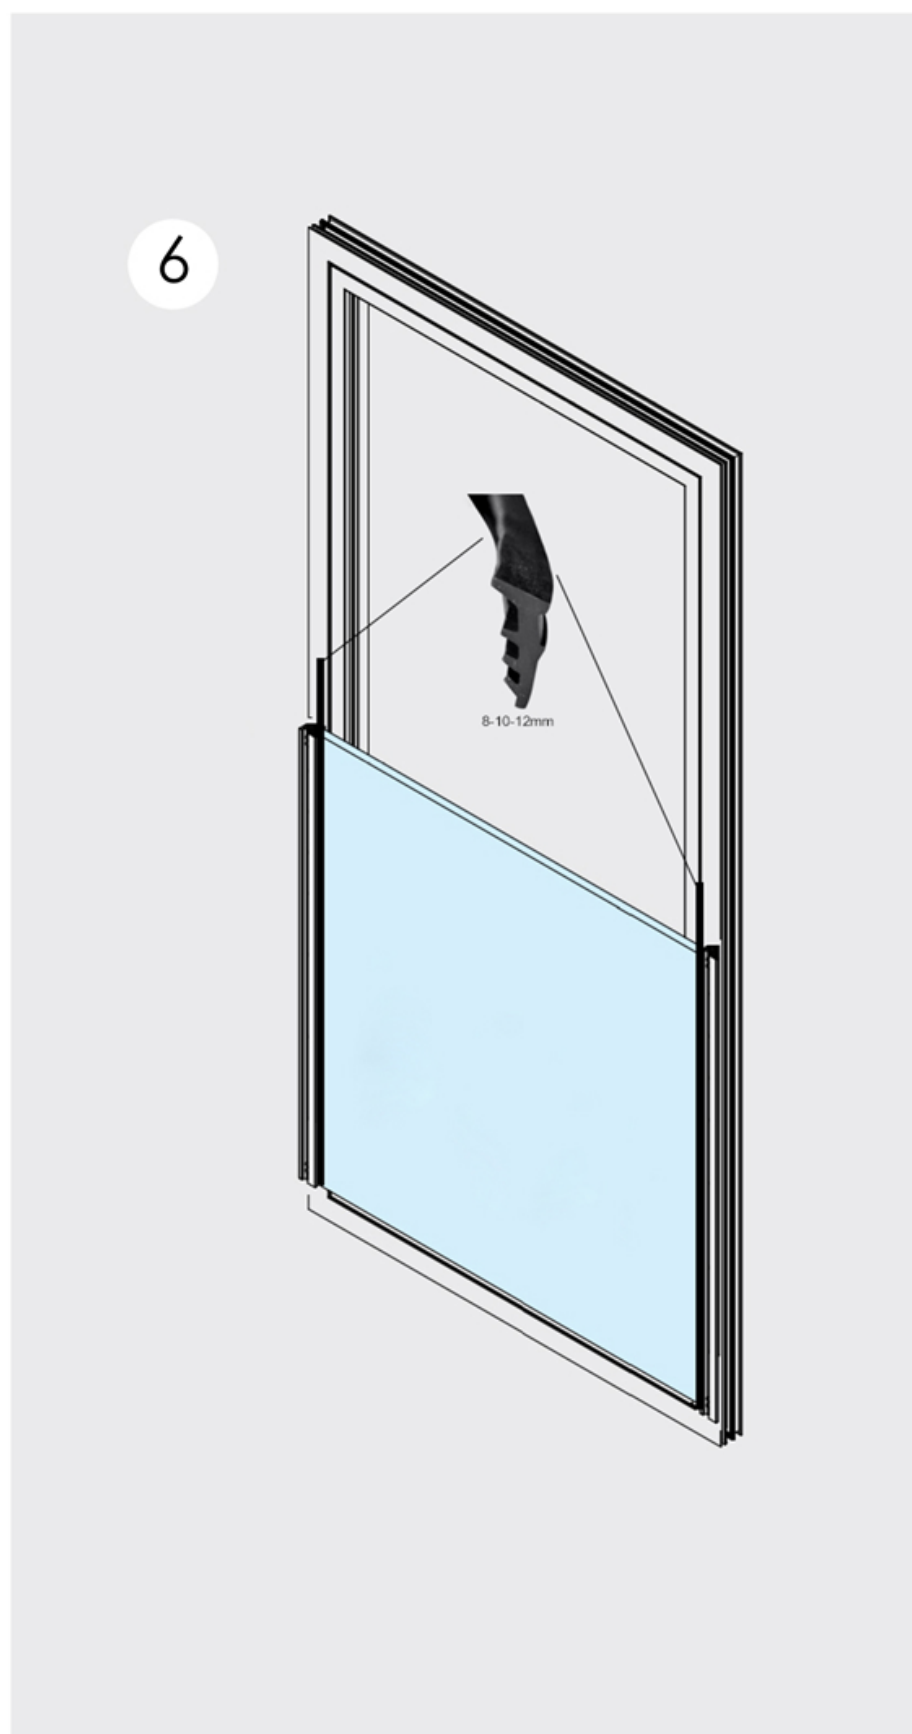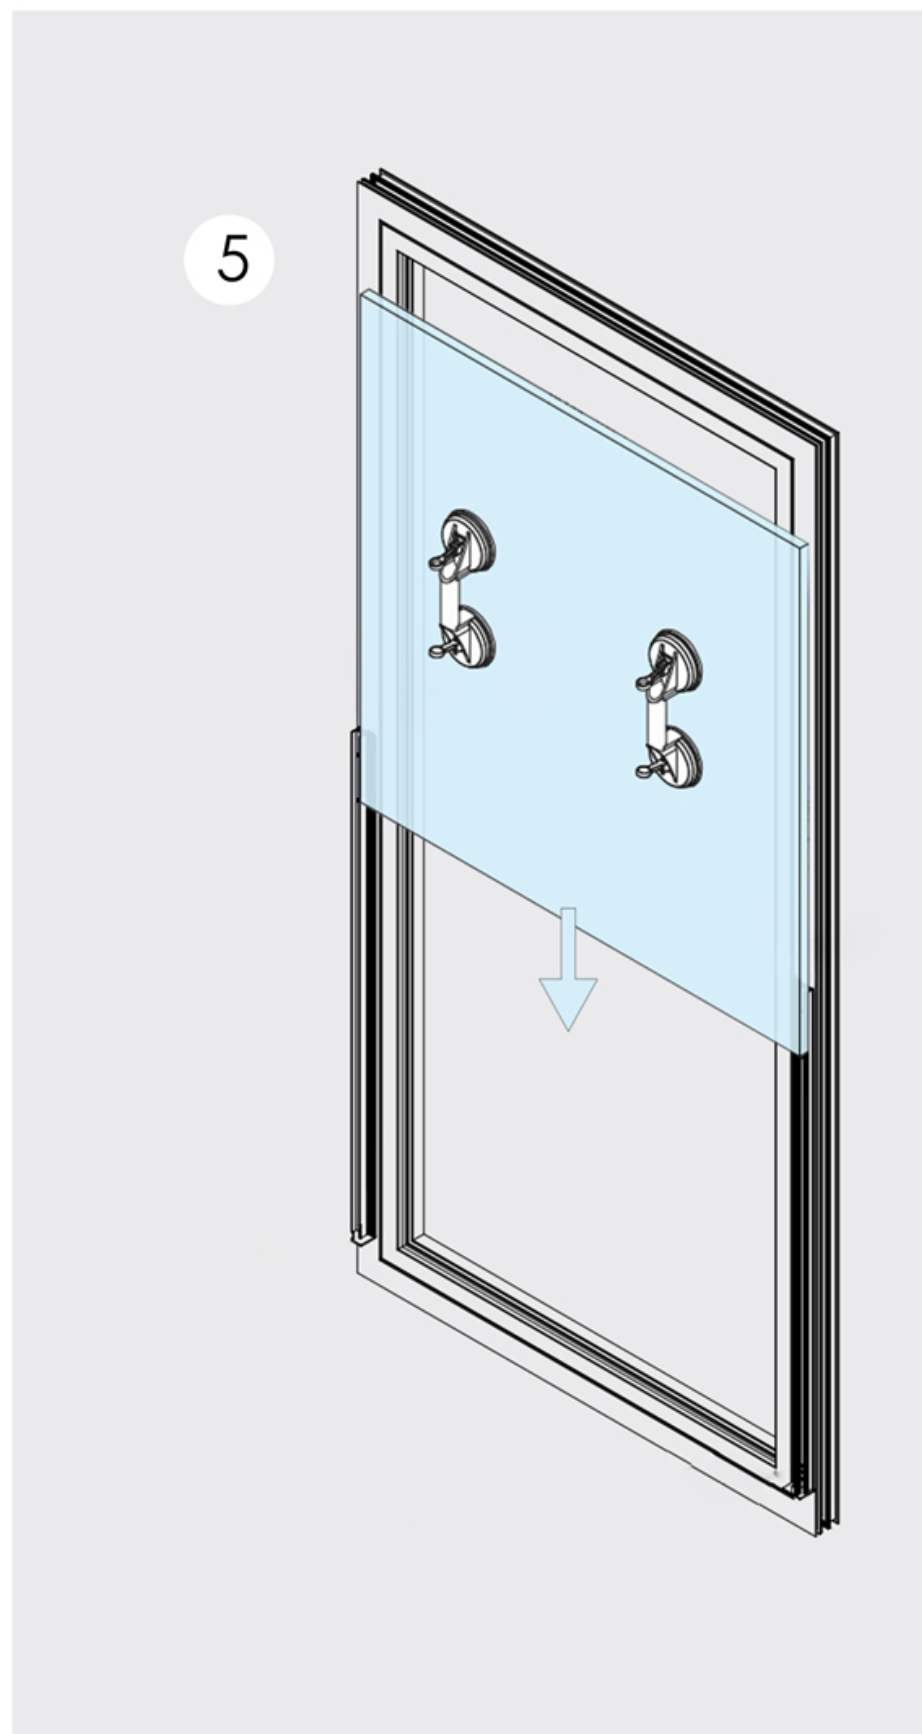


TECHNICAL DATA



R-AA - Right top cap - left bottom cap

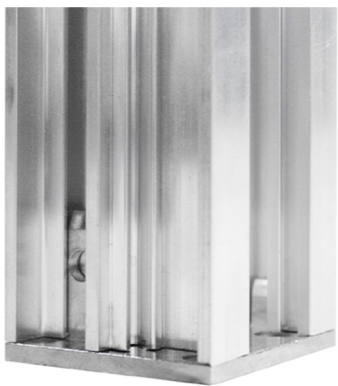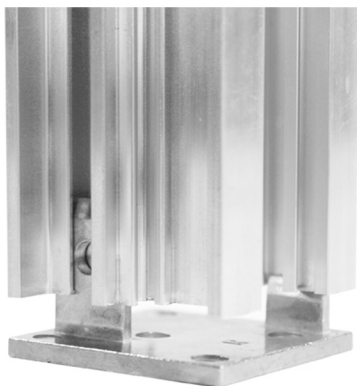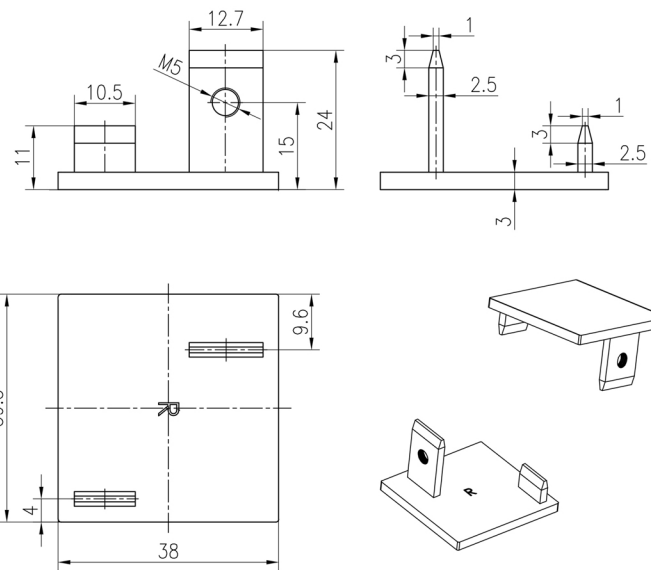

R-AA - RIGHT TOP CAP - LEFT BOTTOM CAP

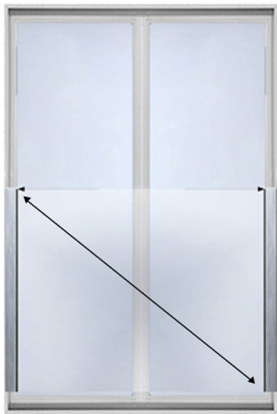

L-BB - Left top cap - right bottom cap

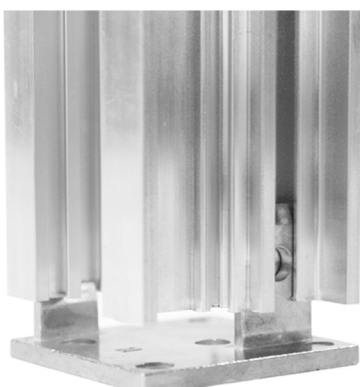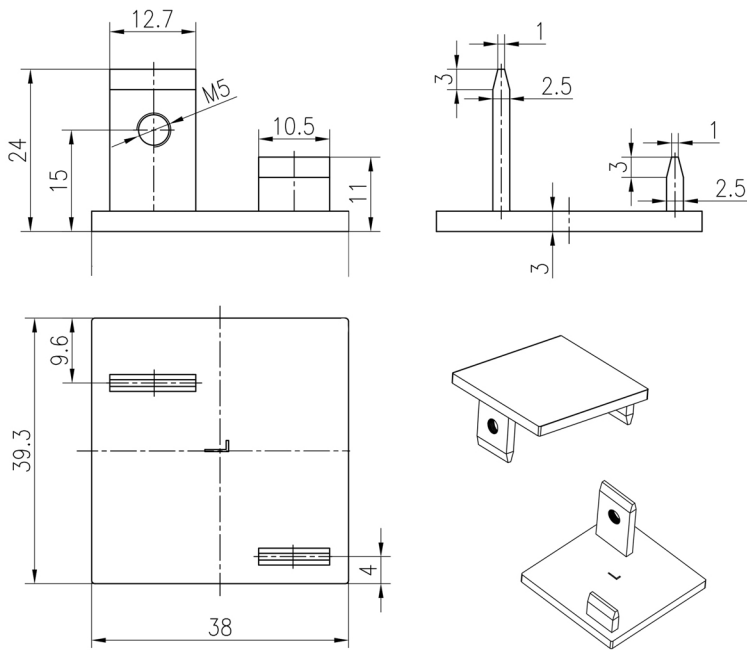

L-BB - LEFT TOP CAP - RIGHT BOTTOM CAP

